


Sports Pocket DAB+ & FM Radio

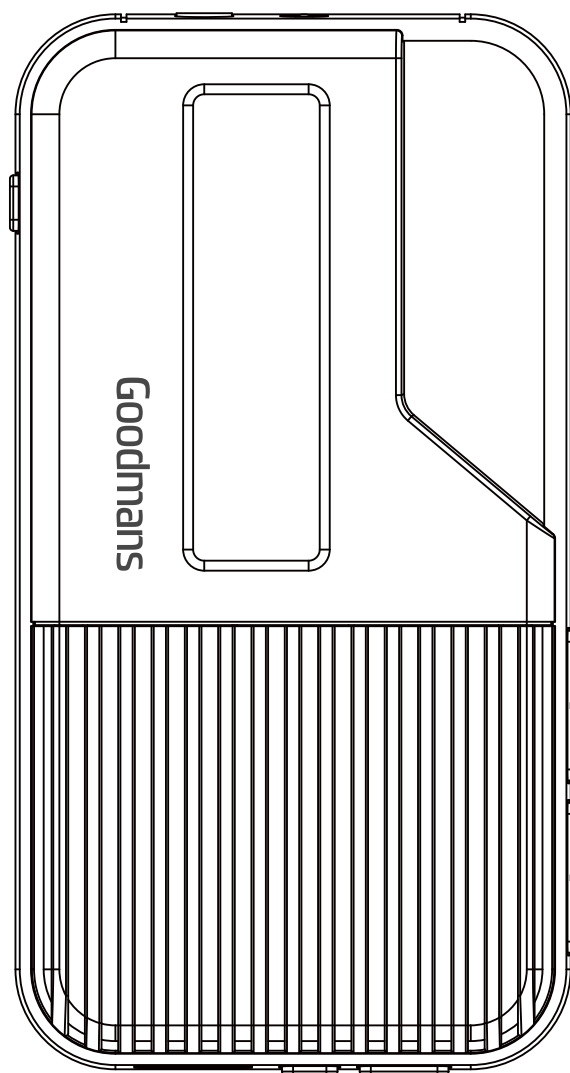

MODEL: GDPRDABS2ST
GDPRDABS2GL
GDPRDABS2RG

USER MANUAL



Goodmans



1 Welcome

2 Your DAB+ Digital Radio

- 2.1 In The Box
 - 2.2 Product Overview
-

3 Quick Setup

- 3.1 Power On and Autoscans
 - 3.2 Changing DAB Stations
 - 3.3 Scanning for DAB Stations
 - 3.4 Adjusting the Volume
 - 3.5 Switching Off
-

4 Features

MODE button

- | | |
|--------------------------|---------------------------------|
| 4.1 DAB+ Mode | 4.9 Storing DAB+/FM Presets |
| 4.2 FM Mode | 4.10 Selecting a Preset Station |
| 4.3 Select DAB+ Station | 4.11 Software Version |
| 4.4 Full Scan(DAB+) | 4.12 Factory Reset |
| 4.5 View DLS information | |
| 4.6 Select FM frequency | |
| 4.7 FM Station seeking | |
| 4.8 Adjust volume | |
-

5 Troubleshooting

6 Technical Specifications



1 Welcome

Thank you for choosing this Goodmans product. We've been making electronics for the British people for 70 years. Each of our projects has been carefully designed to be great at what it does and this one is no exception. We hope you enjoy your new Heritage DAB Digital Radio.

2 Your DAB Digital Radio

2.1 In The Box

Carefully remove your DAB Digital Radio from the box.

Inside the box you will find:

- DAB Digital Radio
- USB cable
- Earphones
- Quick Start Guide
- Guarantee Booklet



USB Cable

Your DAB Digital Radio requires USB power supply.
Please ensure your USB socket is compatible before use.

2.2 Product Overview

A TUN+/- Button

Press to search for radio stations at a higher or lower Frequency or press to choose Next/Previous preset stations.

B Volume+/- Button

Press to change the volume level.

C Earphone Jack

D LED Light

E USB Charge Port

Connect the DAB radio to a computer or other USB charging device, using the included USB cable to charge the battery.

F Power/Mode Button


Press and hold to switch the radio on or off, or press to switch between DAB+ and FM.

G Enter Button

Switch between the following functions: Manual, Pre-scan(PS) and select present station(MEM). Saves station presets.

H LED Torch Button

Press and hold the LED torch button to turn the LED light ON.
Release the button to turn it OFF.

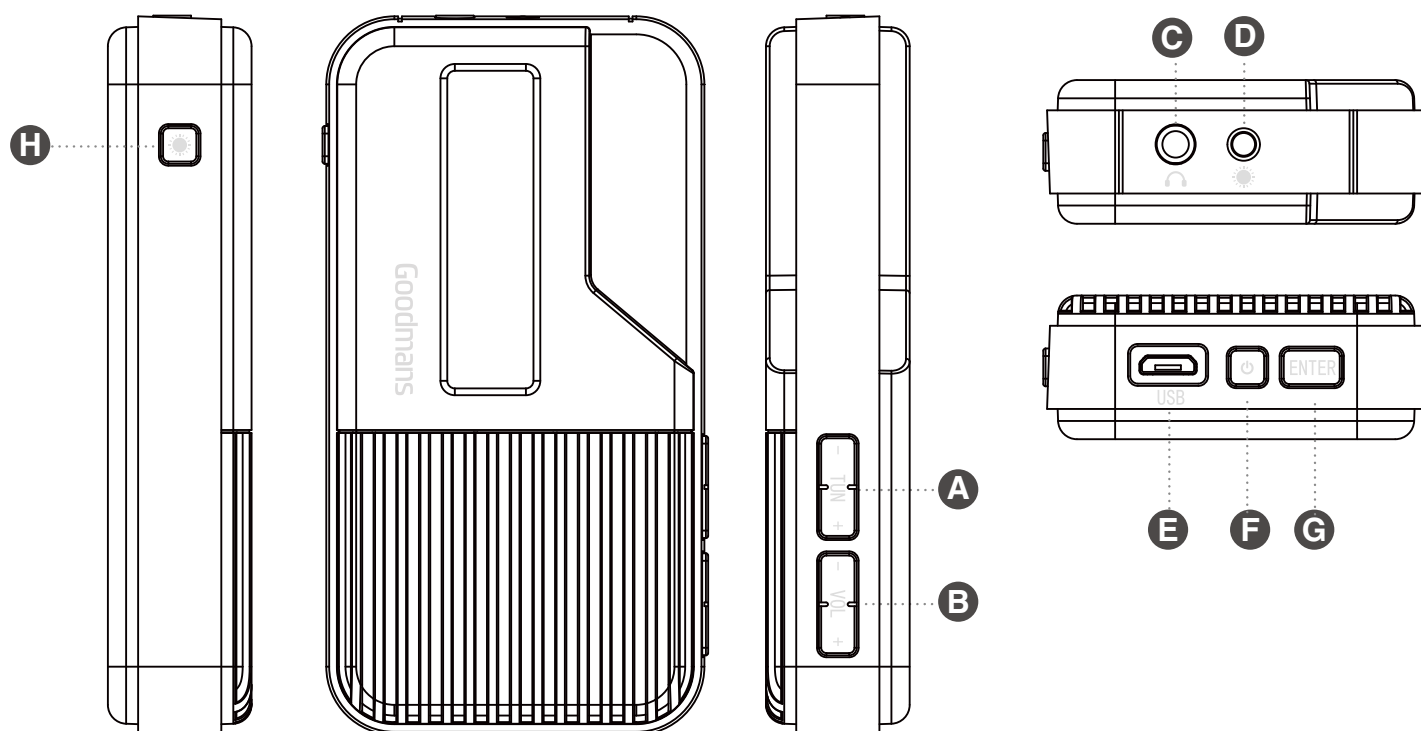

3 Quick Setup



3.1 Power on and Autoscan

1. Connect the power cable to the DAB Radio and USB socket to charge up the radio.
2. Press and hold the Power/Mode button to turn on the radio, it will autoscan for radio stations automatically the first time it is switched on.

3.2 Changing DAB+ stations

1. Make sure it is in DAB+ mode.
2. Press TUN+/- to select the station you want to listen to.

3.3 Scanning for DAB+ stations

1. Make sure it is in DAB+ mode.
2. Press and hold for 2 sec the TUN+/- to perform full scan.

3.4 Adjusting the volume

Press the VOL-/VOL+ to adjust the volume.

3.5 Switching Off

Press and hold the Power/Mode button to switch off the radio.

4 Features

MODE button

4.1 DAB+ mode

1. If the DAB+ radio is in DAB+ mode, press the MODE button repeatedly until FM is shown on the display.
2. Press and hold the TUN+/- for 2sec to perform full scan.

4.2 FM Mode

1. If the DAB+ radio is in FM mode, press the MODE button repeatedly until DAB+ is shown on the display.
2. Press and hold the TUN+/- for 2sec to perform full scan.

4.3 Select DAB+ station

In DAB+ mode, press TUN+/- to select the station you want to listen to.

4.4 Full Scan(DAB+)

In DAB+ mode, press and hold for 2 sec the TUN+/- to perform full scan.

4.5 View DLS information

When you are listening to DAB+ station, press and hold for 3-4 sec the ENTER button to view the DLS information.



4.6 Select FM frequency

In FM mode, press TUN+/- select the FM frequency you want to listen to.

4.7 FM Station seeking

In FM mode, press TUN+/- and hold to seek for the nearest FM station.

4.8 Adjust Volume

Press VOL+/VOL- to adjust volume levels, there are totally 15 volume levels.

4.9 Storing DAB+/FM Presets

When you are listening to the DAB+/FM station you want to store, press and hold the ENTER button for 2 seconds to store the station you want to store.

4.10 Selecting a Preset Station

In DAB+/FM mode, press and hold the ENTER button to recall the stored station list, press the TUN+/- to select the preset station you want to listen to.

4.11 Software Version

Under the FM mode, quick press the TUN-, VOL-, TUN+, VOL+, ENTER button to check the software version.

4.12 Factory Reset

If you need to factory reset your DAB radio, carefully press the RESET button located in the earphone port using a pointed object.

5 Troubleshooting



Problem	What to do
There is no sound from my radio	Check that the volume is not set to the minimum. Make sure that the radio has been tuned to DAB/FM stations.
The display shows 'NO SERVICES AVAILABLE' in DAB mode	Make sure that DAB coverage exists in your area. Make sure the earphones are properly connected to the radio. Try adjusting the location of the radio.
Poor reception	As with any radio service, there will be areas of weak signal that may cause poor reception. If reception is still poor, try re-locating the radio to another part of the room.
Some of the buttons on the DAB Digital Radio are not working	Press the RESET button located in the earphone port using a needle or other sharp object.

6 Technical Specification

Model Number	GDPRDABS2ST, GDPRDABS2GL, GDPRDABS2RG
Power Supply	USB Output
Frequency Range	FM: 87.5-108MHz DAB+: 174-240MHz
LCD Display	1.7-inch LCD Display
Battery Capacity	350mAh
Dimensions	95mm(H)x50mm(W)x18mm(D)