



Micro Bit Assembly Instructions

List of Parts;

- Micro Bit enclosure
- 2 AAA batteries (not supplied)
- Micro Bit PCB (not supplied)

List of Finished Parts;


- Completed Micro Bit



1. Remove the end cover by pinching at both sides and pulling.





2. Remove the clear plastic cover again by pinching at the sides and lifting.

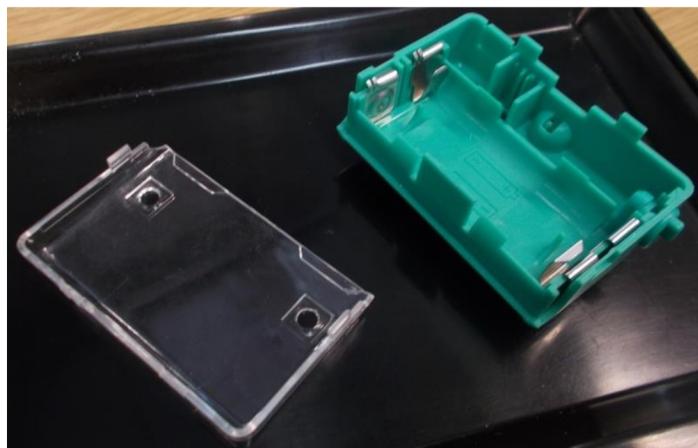


3. Insert the batteries.




4. With the batteries inserted the Micro Bit PCB can be placed on-top. This just sits on top of the batteries as the cover keeps it in place. (The board will only sit one way but the golden strip needs to be over hanging the edge)

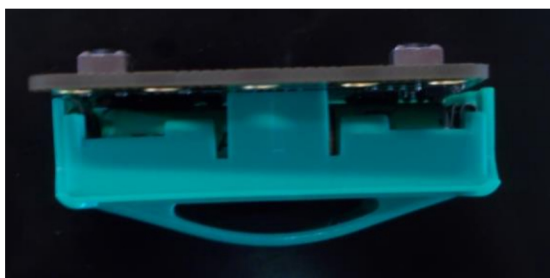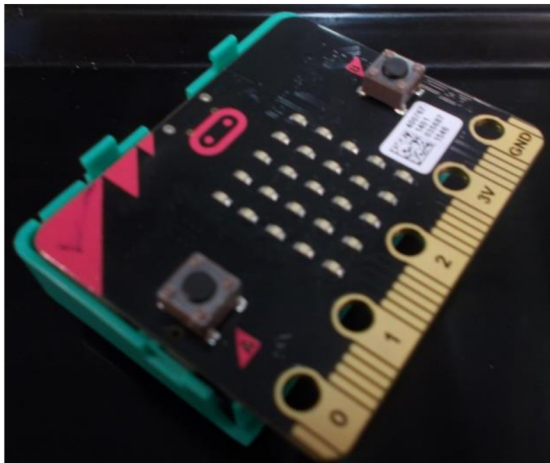

5. The next step is to secure the clear cover.

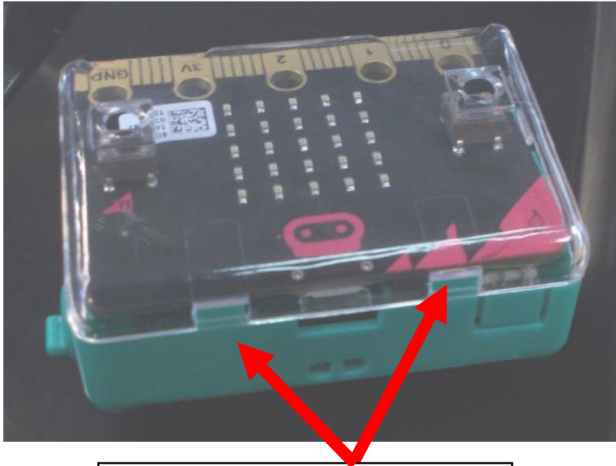

Place the cover with the locating holes at the back secure first.

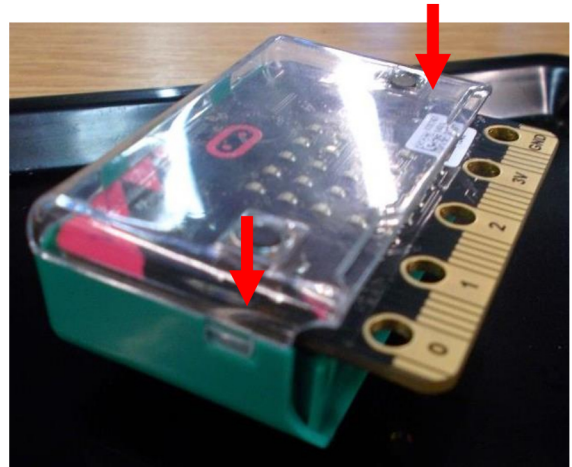

Then secure the cover by pushing down on either side.

6. Last step is to secure the end cover. Line up the two sections shown in the image below and then apply pressure to clip the two pieces together.

